

How to set M-BUS's Frequency



Huawei Technologies Co. Ltd.

The data transfer rate can be set to a lower value, to enhance data communication.

Procedure:

1. Login on Smartlogger3000 as Advanced User
2. Choose **Monitor** menu→select **PLC**→**Network Settings**→select **Network frequency band**→ set network band between **0.5MHz-3.7MHz**→**Submit**

